

**Read this info before using
Borka kit for the first time!**

Borka Torque Driver

Model: BTD1070-IP

Tightening torque adjustment range: 10-70 inch-lbs.

Torque calibration accuracy: +/- 4% of torque values.

Made in the U.S.A. US Patent # 8,667,870 B2

Borka Tools, Division of Borka Enterprises, LLC

29383 Breezewood, Farmington Hills, MI 48331

Phone: 248-798-7621 E-mail: info@borkatools.com

Borka Torque Driver design is unique. In order to apply the torque correctly, always follow video instructions, provided by **X-Ring channel on Youtube**. To access instructional video, search Youtube using this exact text line:

allintitle:"Borka BTD Instructions"



Before applying the torque, make sure that the button is in the middle position (see picture on the left). To torque the fastener, hold the torque driver and apply the torque as recommended in X-Ring "**Borka BTD Instructions**" video. When button moves to the side with a "click", stop applying pressure to the button. After torque application, always reset the tool by pushing the button back to the middle position as shown.

If your kit includes Borka Precision Torque Limiter (PTL), watch video guide by X-Ring channel on Youtube. Search using this text line: **allintitle:"Borka PTL Instructions"**

For kit detailed demonstration and several examples of application, search Youtube for a video using this text line: **allintitle:"2020 Borka Torque Driver Combo Kit"**